

Replacement Guide

for Screen Cover Plate on Self-Storing Door with Retractable Insect Screen



Please Do Not Return Product to Store!


PLEASE call the storm door Solution Center at 1-800-933-3626, with any questions regarding installation, lost part replacement, or anything else related to your storm door purchase.

Read this entire guide before you begin your installation. If your abilities do not match the requirements of this installation, contact an experienced contractor.

PARTS OVERVIEW

Your installation kit should contain the following parts.

- A** Replacement Screen Cover Plate
- B** #6-20 x 5/8" Slotted Hex Washer Head Screws (2)

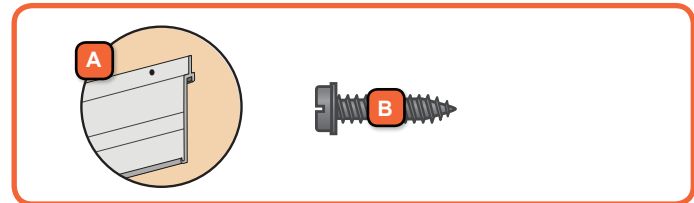

SAFETY FIRST: Please read and follow all cautions and warnings in this guide.

WARNING

Improper use of hand or power tools could result in injury and/or product damage. Follow equipment manufacturer's instructions for safe operation. Always wear safety glasses.

WARNING

 
Weight of window and door unit(s) and accessories will vary. Use a reasonable number of people with sufficient strength to lift, carry, and install window and door unit(s) and accessories. Always use appropriate lifting techniques.

RECOMMENDED TOOLS

Safety Glasses



Flathead Screwdriver
(or 1/4" Socket)



INTERIOR VIEW VISTA INTERIOR VUE DE L'INTÉRIEUR	=	VIEW
EXTERIOR VIEW VISTA EXTERIOR VUE DE L'EXTÉRIEUR	=	VIEW




EMCO Enterprises, Inc., is a wholly owned subsidiary of Andersen Corporation. EMCO manufactures and supports the limited warranties for Andersen® and EMCO® doors. "Andersen", "EMCO" and all other marks where denoted are trademarks of Andersen Corporation. ©2014 Andersen Corporation. All rights reserved.

Andersen SDD, PO Box 853
Des Moines, IA 50306-0853
Rev 1-2014 12043 Print in B&W


p/n 504296

1 REMOVE SCREEN COVER PLATE

Tools needed:


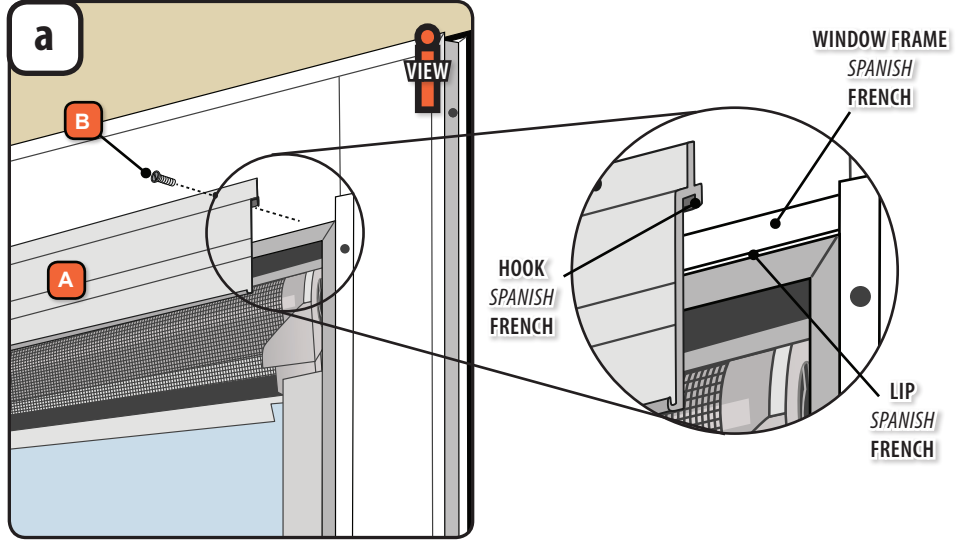
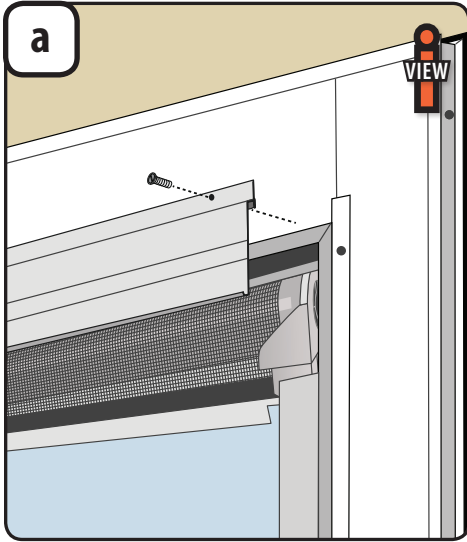


2 REPLACE SCREEN COVER PLATE

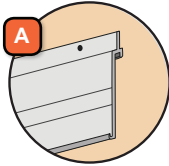

5/8" **B** x 2

Tools needed:

1. Using a flathead screwdriver, remove screws from the screen cover plate.
2. Once loose, the screen cover plate may be removed by lifting up and towards you. If needed, hold cover plate with one hand while lightly tapping up on end.
3. Properly dispose of cover plate and screws.

1. To install replacement screen cover plate (A), make sure that the hook of the screen cover plate hooks over the lip at the top of the window frame.
2. Press firmly on cover plate until holes align and secure to door using provided screws (B).