

Installation Guide

Replacement Latch Striker for Andersen® LuminAire™ Retractable Insect Screen Door


For installation help please visit www.AndersenLuminAire.com/install



Please Do Not Return Product to Store!

PLEASE call the Storm Door Solution Center at 844-813-6664, with any questions regarding installation, lost part replacement, or anything else related to your retractable insect screen purchase. Replacement parts can also be found at: parts.andersenstormdoors.com


Read this entire guide before you begin your installation. If your abilities do not match the requirements of this installation, contact an experienced contractor.

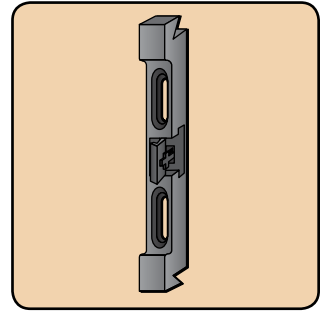

PARTS OVERVIEW

Your replacement part should contain the following parts.

- 1 Latch Striker
- 2 Latch Striker Screws

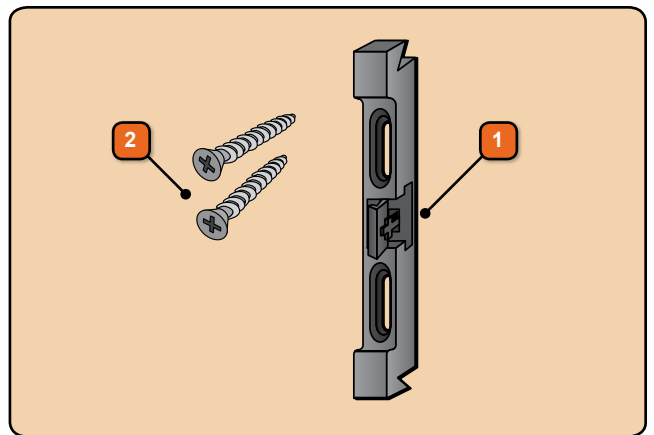

SAFETY FIRST: Please read and follow all Cautions and Warnings in this guide.


RECOMMENDED TOOLS



Masking Tape



Safety Glasses



Screwdrivers

WARNING

Follow manufacturers' instructions for hand and power tools. Always wear safety glasses. Failure to do so could result in injury, product or property damage.

CAUTION

Metal components of the retractable insect screen may become hot when exposed to sunlight.

IMPORTANT

The retractable insect screen is intended for reasonable insect control and not the retention of objects, persons, or pets within the interior. The retractable insect screen will not stop a person from falling through the door.


! This is the Safety Alert Symbol used to alert you to potential injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

Signal Word and Consequence

COULD Result in:	WARNING Major Injury / Death	COULD Result in:	CAUTION Minor Injury
COULD Result in:	NOTICE Product or Property Damage	IMPORTANT Procedure and Product Information	

STRIKER REMOVAL & REINSTALLATION


 
Tools Recommended:

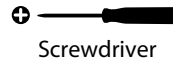

Screwdriver





Masking Tape

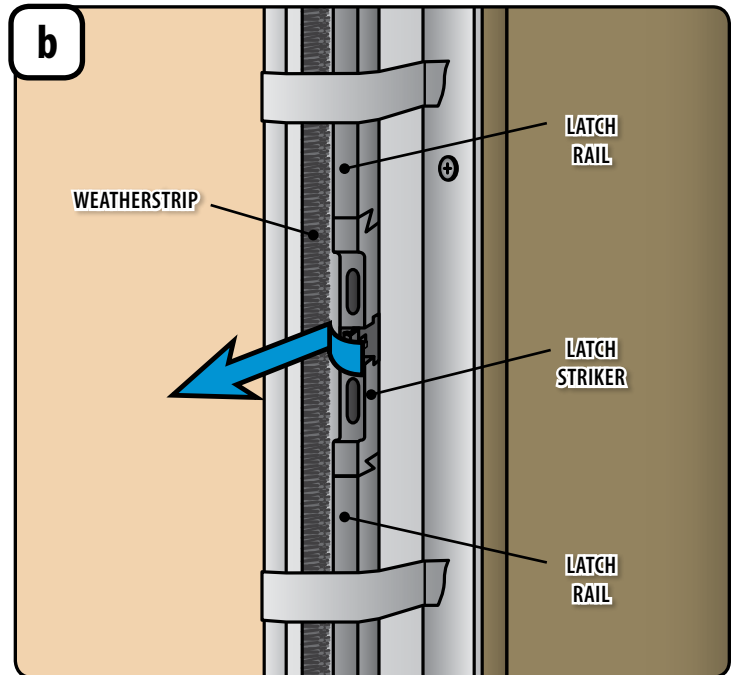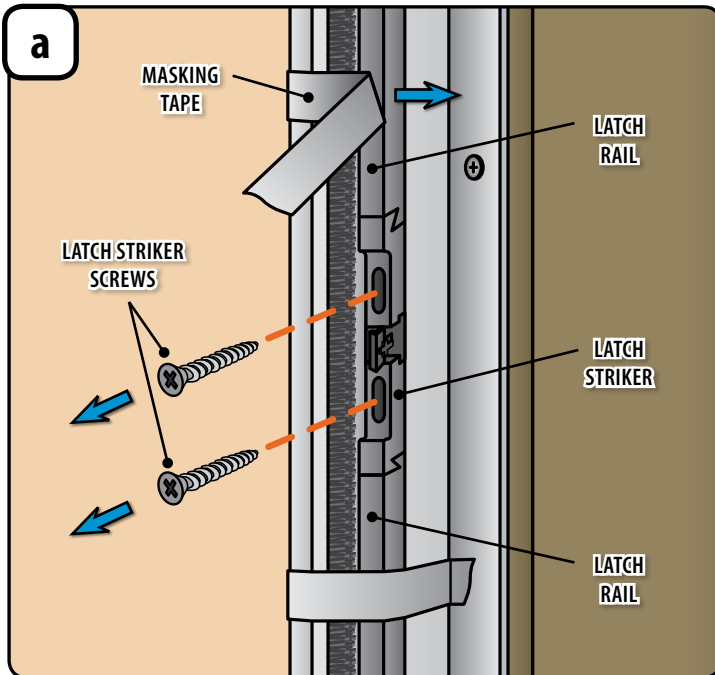

a1 Apply Masking Tape over the top and bottom Latch Rails.

a2 With a Phillips screwdriver remove the two Latch Striker Screws from the Latch Striker and dispose of properly.

b Remove the Latch Striker by rotating toward Weatherstrip and out of the Latch Rails and dispose of properly.

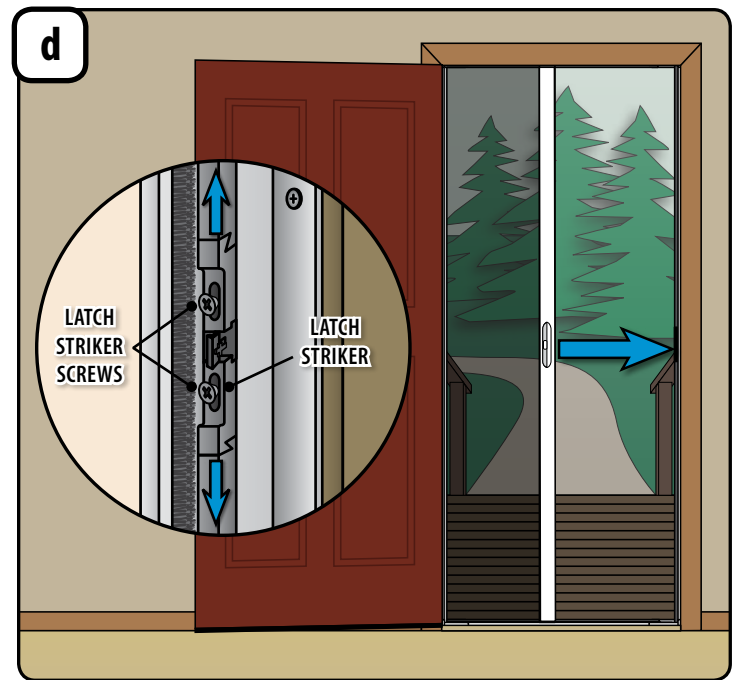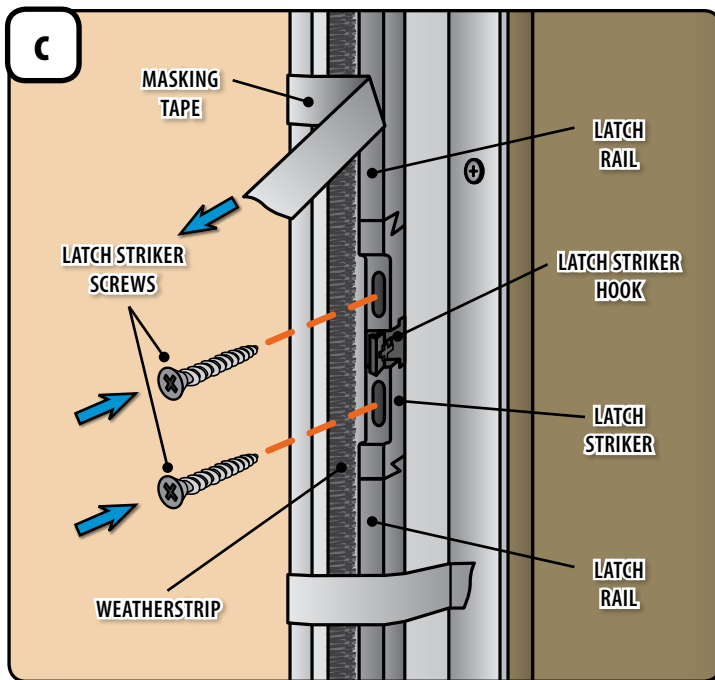

c1 Rotate the Replacement Latch Striker into place, so it fits into the notches. Be sure to point the Latch Striker Hook toward the exterior Weatherstrip.

c2 Align the Latch Striker with the predrilled screw holes. With a Phillips screwdriver secure the Latch Striker into the Latch Rail with the screws provided.

c2 Remove the Masking Tape from the Latch Rails.

d1 Close the retractable insect screen to test for proper latching.

d2 If not latching properly, loosen screws and adjust Latch Striker up or down accordingly. Retighten Latch Striker Screws.

d3 Test and repeat adjustments until proper latching is achieved.