Installation Guide

Replacement SmoothControl+[™] Right Hand Hydraulic Closer Assembly for Andersen[®] 1-1/2″ Fullview Storm Doors



Please Do Not Return Product to Store!

PLEASE call the storm door Solution Center at 1-800-933-3626,

with any questions regarding installation, lost part replacement, or anything else related to your storm door purchase.

Read this entire guide before you begin your installation. If your abilities do not match the requirements of this installation, contact an experienced contractor.

PARTS OVERVIEW

Your installation kit should contain the following parts. However, in some door models, not all of the parts will be used.



Hydraulic Closer Arm & Bolt Assembly


Not Shown




Pink Hardware Bag

Andersen.

Clear Hardware Bag

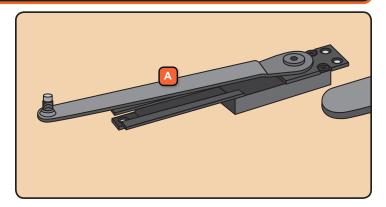

SAFETY FIRST: Please read and follow all Cautions and Warnings in this guide.

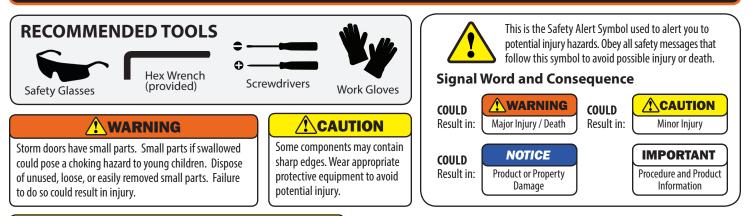

Closer is under tension and has several areas that can pinch. Use caution when working around the closer components. Failure to do so may result in injury.


Andersen Storm Door Division is a wholly owned subsidiary of Andersen Corporation. Andersen Storm Door Division manufactures and supports the limited warranties for Andersen® and Des EMCO® storm doors. "Andersen" and "EMCO" and all other marks where denoted are trademarks 06-

Andersen SDD, PO Box 853 Des Moines, IA 50306-0853 06-2019 r 15043 Print in Color




of Andersen Corporation. ©2019 Andersen Corporation. All rights reserved.


1 REMOVE HYDRAULIC CLOSER AND INSTALL REPLACEMENT PART (Right Hand) Tools recommended: Hex Wrench (provided) Screwdrivers CLEAR HARDWARE BAG Unpainted Flat Head Screws (Qty 2)

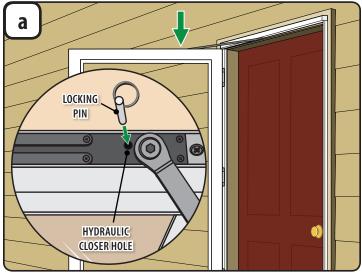


1. With the door seated in the open position look for the hole in the top of the hydraulic closer unit on top of the door frame. Insert the locking pin found in the pink hardware bag into the hydraulic closer hole.

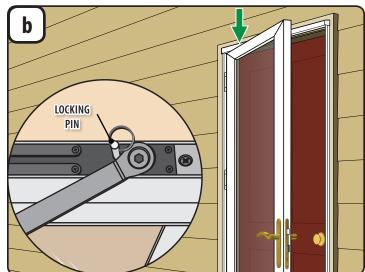

1. Close the door until the closer arm is resting against the locking pin which will keep the door from closing fully.

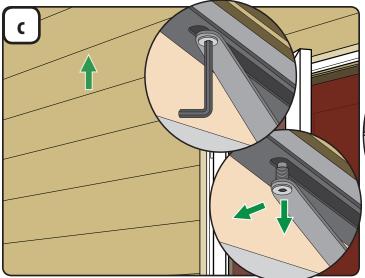

- From the interior side of the door, loosen the hydraulic closer arm connecting bolt on the under-side of the rain cap damper assembly using the hex wrench provided in the pink hardware bag.
 NOTE: The connecting bolt is secured to the closer arm.
- **2.** Once the connecting bolt is completely loose, pull down slightly on the closer arm and swing the door out of the way.

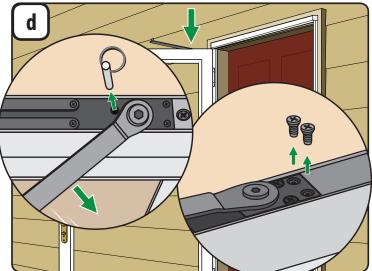


- 1. Remove the locking pin from the top of the hydraulic closer unit by pulling the closer arm slightly away from the door frame and lifting locking pin from closer hole. Then carefully let the closer arm swing back to its neutral position over the closer.
- **2.** Using a Phillips screwdriver, remove the two unpainted screws from the top of the hydraulic closer unit and properly dispose of the screws.


IMPORTANT

If you have a fixed laminated glass 3-point lock door, go to the steps on page 4 of this guide after completion of this step (Step D).




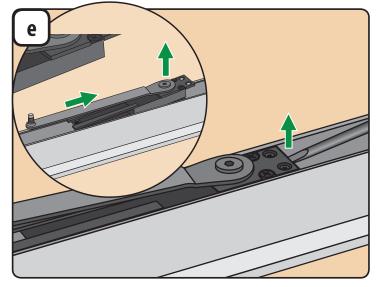


- 1. Slide a flat blade screwdriver between the hydraulic closer base plate and the top of the door frame.
- **2.** Lift up on the hydraulic closer unit with the screwdriver and slide the unit sideways toward the hinge side of the door until it is completely removed. Properly dispose of old hydraulic unit.

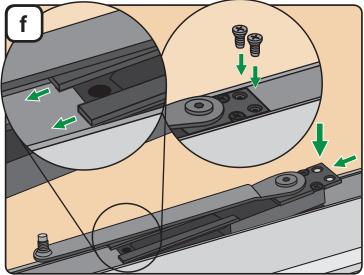


- Install the new replacement hydraulic closer unit into the top of the door using the reverse process of removing the old unit. When installing the new unit, ensure the three-prong fork on the mounting plate is pointing toward the handle side of the door frame. Also, the middle prong must be positioned below the surface of the door frame and the two outside prongs above the surface of the door frame.
- **2.** Install two unpainted flat head screws into the top of the hydraulic closer unit. The screws are provided in the clear hardware bag.

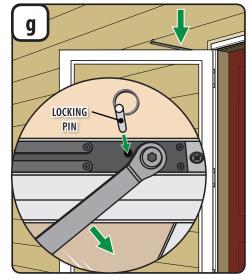

1. Pull the closer arm away from door frame towards the interior until it clears the hydraulic closer hole, then reinstall the locking pin into the top of the hydraulic closer unit.

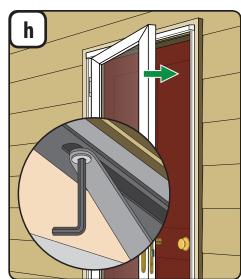

1. Partially close the door and pull down slightly on the closer arm to align the bolt under the rain cap. Reconnect the hydraulic closer arm to the rain cap damper assembly using the provided hex wrench.

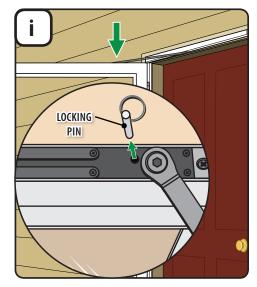

1. Open door fully and remove the locking pin from the top of the hydraulic closer unit.

REMOVE HYDRAULIC CLOSER AND INSTALL REPLACEMENT PART FOR FIXED LAMINATED (continued)






Hex Wrench


(provided)




CLEAR HARDWARE BAG

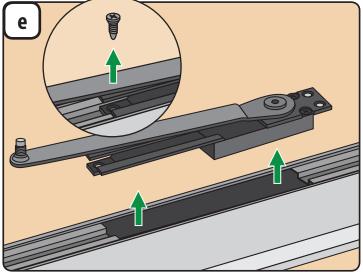


- 1. Using a Phillips screwdriver, remove the one additional unpainted screw from the other end of the hydraulic closer unit and properly dispose of the screw.
- **2.** Lift up the hydraulic closer unit straight out of door frame and properly dispose of the hydraulic closer.

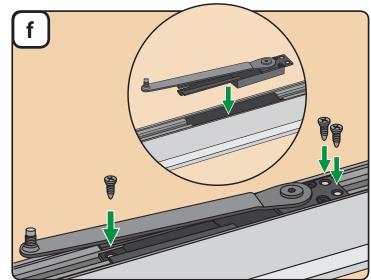


- 1. Install the new replacement hydraulic closer unit into the top of the door, being careful to position it so all three screw holes align with screw holes in door frame.
- **2.** Install three unpainted flat head screws into the top of the hydraulic closer unit. The screws are provided in the clear hardware bag.

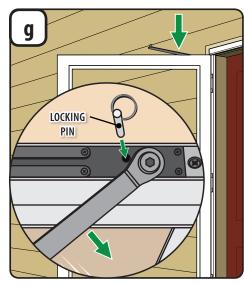

1. Pull the closer arm away from door frame towards the interior until it clears the hydraulic closer hole, then reinstall the locking pin into the top of the hydraulic closer unit.

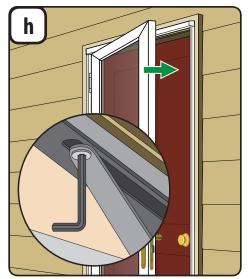

1. Partially close the door and pull down slightly on the closer arm to align the bolt under the rain cap. Reconnect the hydraulic closer arm to the rain cap damper assembly using the provided hex wrench.

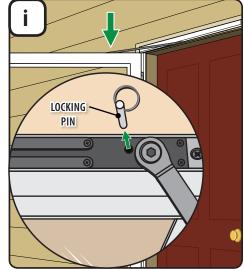

1. Open door fully and remove the locking pin from the top of the hydraulic closer unit.