E75 & E150 GLASS INSTALLATION INSTRUCTIONS

IMPORTANT: READ ENTIRE INSTRUCTIONS BEFORE BEGINNING INSTALLATION

BE ADVISED:

DURING INSTALLATION PROCESS, FOLLOW ALL STANDARD SAFETY PROCEEDURES WITH CARE USING ALL PROPER SAFETY EQUIPMENT AND DISPOSAL METHODS.

IT IS ALSO RECOMMENDED THAT A HELPER BE AVAILABLE TO

IT IS ALSO RECOMMENDED THAT A HELPER BE AVAILABLE TO ASSIST WITH SOME OF THE STEPS.

MATERIALS NEEDED FOR INSTALLATION:


- 1- Flat Head Screwdriver
- 1- Gloves
- 1- Safety glasses
- 1- Container/ box for glass disposal
- 1- Cardboard or tarp for work surface protection

1. REMOVE FULLVIEW WINDOW (ON FULLVIEW AND CROSSBUCK MODELS)

NOTE: IF YOU HAVE A SELF-STORING DOOR, PROCEED DIRECTLY TO STEP 2.

- **A.** Carefully start at one end of the retainer. Use a flat head screwdriver to push the retainer in and towards the center of the door. After approximately 2" of retainer is removed from door track, grasp retainer with hand and pull the rest of the way out.
- **B.** Repeat step B to remove other retainer.
- **C.** Carefully lift window out and dispose of glass in a proper manner.


NOTICE: IF GLASS IS BROKEN, HANDLE WITH CARE. ALWAYS DISPOSE OF GLASS IN A PROPER MANNER, AND CLEAN UP WORK AREA CAREFULLY.

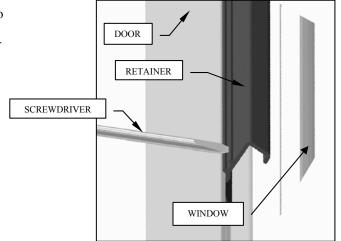

2. REMOVE VENT GLASS FROM DOOR

- **A.** Pull the window latches on the bottom window toward each other.
- **B.** Lift the lower portion of the window toward you and rotate the window to remove it.

NOTICE: AFTER REMOVAL, KEEP WINDOW VERTICAL. NEVER STORE OR CARRY WINDOWS FLAT.

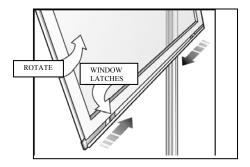

3. INSTALL WINDOW UNIT- (ON FULLVIEW & CROSSBUCK MODELS)

NOTE: IF YOU HAVE A SELF-STORING DOOR, PROCEED DIRECTLY TO STEP 4.

- A. Place window in opening by centering bottom of window in opening and carefully tilting top of window toward door.
- **B.** Install the window retainers by orienting retainer as shown in illustration for step 4, push on flat surface towards door frame to install.
- **C.** Repeat step B for other retainer on opposite side of window or screen.

4. RE-INSTALL VENT WINDOW

- **A.** Angle window and insert top window pins into inner track. **FIGURE 7A**
- **B.** Pull the window latches on the bottom of window toward each other. Rotate window into place and lower to bottom of door. **FIGURE 7B**

