

E 75 & E150 REPLACEMENT SWEEP INSTALLATION INSTRUCTIONS

IMPORTANT: READ ENTIRE INSTRUCTIONS BEFORE BEGINNING INSTALLATION

MATERIALS NEEDED FOR INSTALLATION:

- 1- Phillips Head Screwdriver
- 1- Center punch
- 1- Drill with 1/8" bit
- 1- Gloves
- 1- Safety glasses
- 1- Pencil for marking

BE ADVISED:


DURING INSTALLATION PROCESS, FOLLOW ALL STANDARD SAFETY PROCEDURES WITH CARE USING ALL PROPER SAFETY EQUIPMENT AND DISPOSAL METHODS. IT IS ALSO RECOMMENDED THAT A HELPER BE AVAILABLE TO ASSIST WITH SOME OF THE STEPS.

1. REMOVE CURRENT SWEEP

With a Phillips head screwdriver, remove screws holding the sweep to the door. Discard screws and sweep.

2. INSTALL SWEEP (ON FULLVIEW AND CROSSBUCK MODELS ONLY)

- A. Slide the door sweep over the bottom of the door with the mounting slots toward the inside of the door. Align the end of the door sweep with the latch side edge of the door frame.
- B. Position the sweep fin so it touches the door sill completely.
- C. Center punch and drill two (2) 1/8" pilot holes through the sweep mounting slots.

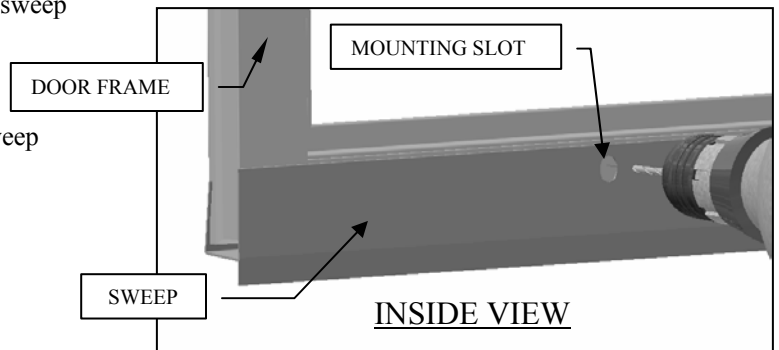


CAUTION: DO NOT DRILL COMPLETELY THROUGH THE DOOR.

- D. Secure the sweep using two (2) #8 x 1/2" screws.

NOTICE: SWEEP IS INTENTIONALLY SHORTER THAN THE WIDTH OF THE DOOR.

3. INSTALL SWEEP ON SELF-STORING DOOR ONLY

- B. Place the sweep on the outside of the door, and check that the fin touches the sill. If it does, then the sweep can be mounted on the inside or the outside of the door. Otherwise, it will need to be mounted on the inside of the door.
- C. Measure and mark the location 3/4" in from each side of the sweep and 1/4" down from the top of the sweep. Also mark a spot at the center of the sweep and down 1/4" from the top.
- D. Drill a 1/8" hole through the sweep at these locations.
- E. Position the sweep so the sweep fin touches the door sill completely and the end of the sweep is aligned with the latch side edge of the door frame.
- F. Center punch and drill three (3) 1/8" pilot holes through the sweep mounting holes.

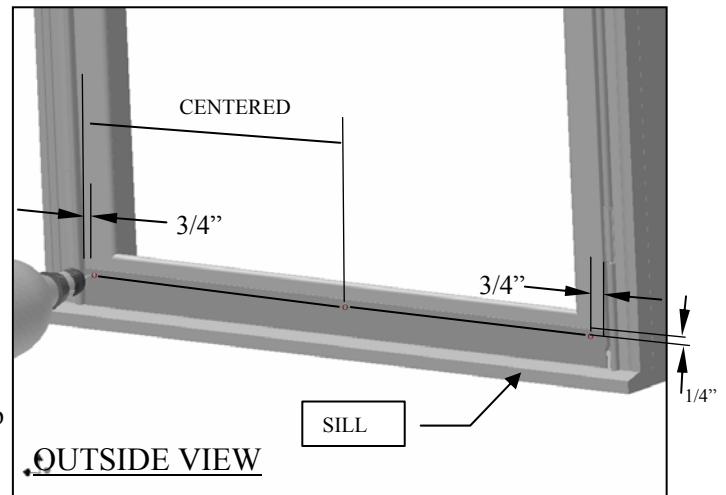

CAUTION: DO NOT DRILL COMPLETELY THROUGH THE DOOR.

- A. Secure the sweep using three (3) #8 x 1/2" screws.

NOTICE: SWEEP IS INTENTIONALLY SHORTER THAN THE WIDTH OF THE DOOR.