

SCREEN CENTER MULLION RETRO-FIT INSTRUCTIONS

STEP 1. Drill a 3/16 diameter hole at each end of the center mullion as shown in FIG. 1.

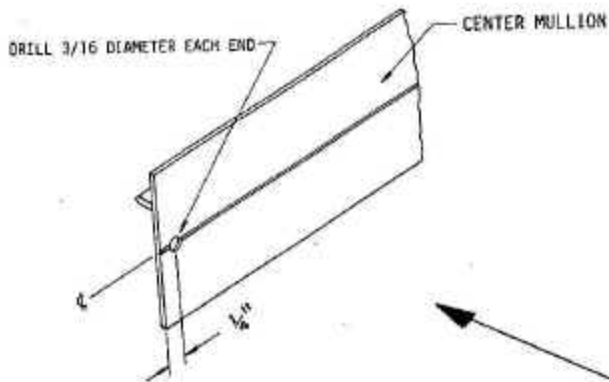


FIG. 1

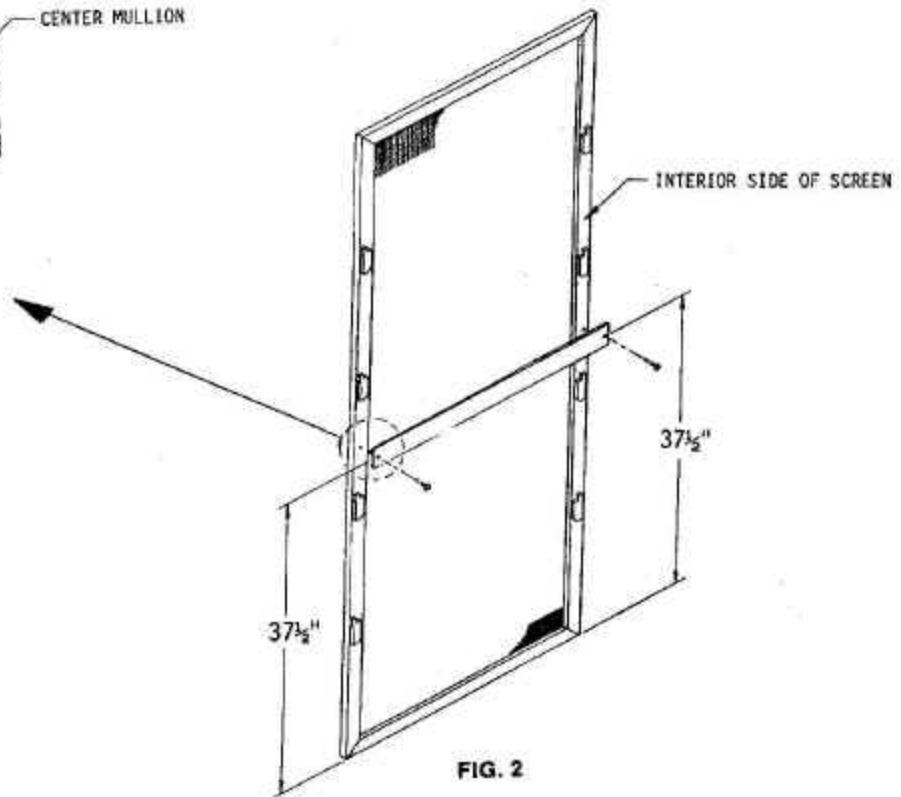


FIG. 2

NOTE: DO NOT REMOVE SCREEN FABRIC IF IT IS NOT DAMAGED.

STEP 2. Place the center mullion on the interior side of the screen so that the hole at each end of the mullion is 37½" from the bottom of the screen and mark the location of these holes on the screen. Using an 1/8" drill bit, drill a pilot hole into the screen at the two locations marked. CAUTION: DO NOT DRILL COMPLETELY THROUGH THE SCREEN FRAME. Using the two screws provided, fasten the center mullion to the screen frame as shown in FIG. 2. DO NOT OVERTIGHTEN SCREWS.

STEP 3. Depending on how tight the screen fabric is after addition of the new mullion or if it is damaged, you may wish to install new fabric.

NOTE: To remove any minor abrasion marks and to clean the surface of the screen center mullion, we recommend using a mild abrasive cleanser.

EMCO

EMCO Specialties, Inc. • 2121 East Walnut Street
P.O. Box 85 • Des Moines, Iowa 50304
(515) 265-8101

P/N 97223