


STORE-IN-DOOR WINDOW / SCREEN TRACK REPLACEMENT INSTRUCTIONS

NOTE: IN ORDER TO REMOVE THE SPACERS, IT IS NECESSARY TO REMOVE THE SCREEN AND THE WINDOW FROM THE DOOR. REFER TO THE SCREEN AND WINDOW REMOVAL AND INSTALLATION INSTRUCTIONS INCLUDED.


STEP 1: Detach the door closers and carefully remove the door from the door jamb by unscrewing the hinge side Z-bar. Lay the door down flat, with the inside of the door facing up (a pair of sawhorses work well for this). It is a good idea to place some cardboard or a blanket underneath the door to avoid scratching it.

STEP 2: Remove the sweep from the bottom of the door.

STEP 3: On the bottom of the door, you will notice two pockets into which the spacers have been inserted. (See FIG. 1)

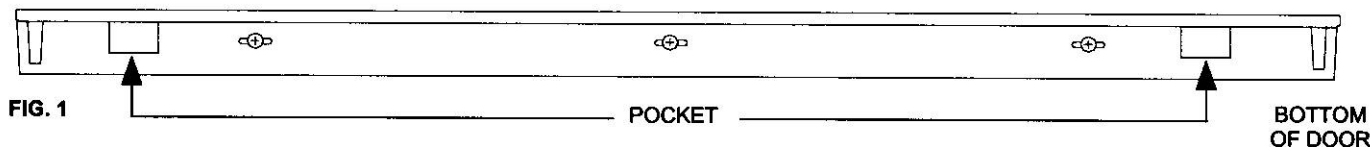

Observe carefully how each spacer is positioned in the door. Notice how the bug seal on the spacer is angled upward. To remove the old spacer, squeeze the spacer as shown with a pair of needle nose pliers, lift up, and pull the spacer out of the door. (See FIG.2)

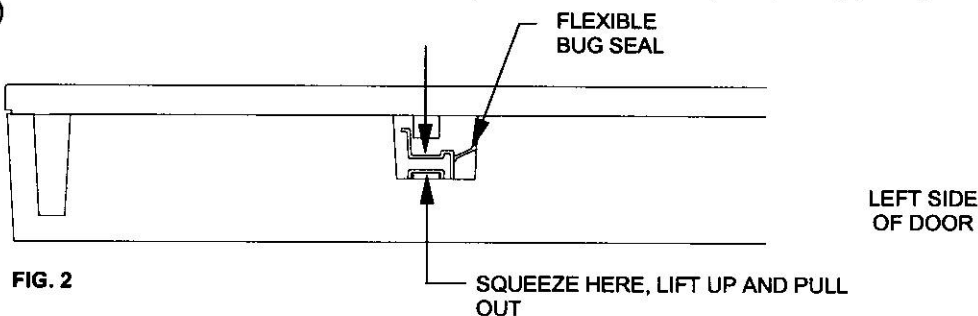

Next, insert the new spacer into the door in the same position as the old one. Be sure the spacer bug seal is angled upward.

STEP 4: Remove the old spacer and install the new one on the opposite side of the door using the same procedure described above.

STEP 5: Re-install the door onto the door jamb.

STEP 6: Re-install the screen and window back into the door per the instructions.

STEP 7: Re-install and adjust the door sweep.

STEP 8: Re-attach both door closers.

EMCO ENTERPRISES, INC.

P.O. Box 853
Des Moines, Iowa 50304
1-800-933-3626


FOREVER DOOR WINDOW / SCREEN TRACK REPLACEMENT INSTRUCTIONS

NOTE: IN ORDER TO REMOVE THE SPACERS, IT IS NECESSARY TO REMOVE THE SCREEN AND THE WINDOW FROM THE DOOR. REFER TO THE SCREEN AND WINDOW REMOVAL AND INSTALLATION INSTRUCTIONS INCLUDED.


STEP 1: Detach the door closers and carefully remove the door from the door jamb by unscrewing the hinge side Z-bar. Lay the door down flat, with the inside of the door facing up (a pair of sawhorses work well for this). It is a good idea to place some cardboard or a blanket underneath the door to avoid scratching it.

STEP 2: Remove the sweep from the bottom of the door.

STEP 3: On the bottom of the door, you will notice two pockets into which the spacers have been inserted. (See FIG. 1)

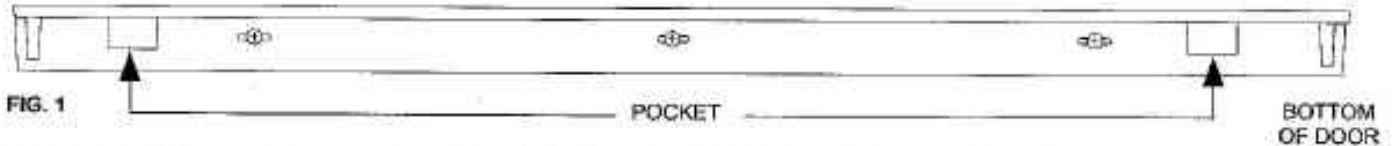

Observe carefully how each spacer is positioned in the door. Notice how the bug seal on the spacer is angled upward. To remove the old spacer, squeeze the spacer as shown with a pair of needle nose pliers, lift up, and pull the spacer out of the door. (See FIG.2)

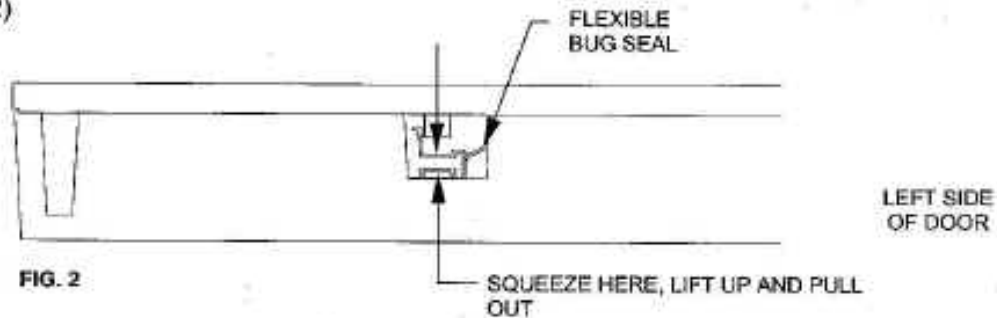

Next, insert the new spacer into the door in the same position as the old one. Be sure the spacer bug seal is angled upward.

STEP 4: Remove the old spacer and install the new one on the opposite side of the door using the same procedure described above.

STEP 5: Re-install the door onto the door jamb.

STEP 6: Re-install the screen and window back into the door per the instructions.

STEP 7: Re-install and adjust the door sweep.

STEP 8: Re-attach both door closers.

EMCO SPECIALTIES, INC.

P.O. Box 853
Des Moines, Iowa 50304
1-800-933-3626

P/N 970469
REVISED 6/92